



Spreader Bar QT

For double clamps, for fitting both single clamps.

Fixed model with set distance between the two clamps (QT model).

The spreader bar is firmly bolted to the clamps, yet is flexible beared in the driving direction and is fixed with individual swing dampers via rubber buffers.

Also available with hydraulic distance adjustment of the two clamps so that the distance between the packs is reduced and space is secured in the storage area (QT-H and QT-HL models).

2 x STAZ with QT + crane boom

Type	Dead Weight kg (lbs)	Working Load Limit/WLL kg (lbs)	Shifting mm (in)	Order-Number
QT	190 (419)	6,500 – 9,500 (14,330 – 20,944)	0 (0.00)	47100037
QT-H	320 (705)	6,500 – 9,500 (14,330 – 20,944)	0 – 400 (0.00 – 15.74)	47130019
QT-HL	320 (705)	6,500 – 9,500 (14,330 – 20,944)	0 – 640 (0.00 – 25.20)	47130016



Hydraulic Rotator

Fitted between the clamp and the fork sleeves/crane boom, enabling stacks to be lifted and deposited, according to requirements.

DK-506

Type	Dead Weight kg (lbs)	Working Load Limit/WLL kg (lbs)	Angle Pivoting-/Rotation Angle ° Degree	Order-Number
DK-506	42 (93)	6,000 (13,228)	360	47150080
GV-12-2	56 (123)	7,500 (16,535)	360	47150055