

## PaverADJUSTER / Alignment Bar RE

Drive down into the joint by applying pressure to the foot rest. Stretch a string line along the bond line and shift the pavers.

- Replaceable spring steel blade
- Hand and foot rests to drive into joint
- Zinc plated
- Handle Length: 36 in (91 cm)

Type	Handle Length in (cm)	Dead Weight lbs (kg)	Order-Number
PaverADJUSTER	36 (91)	3.3 (1.5)	51800011
Adjuster Replacement Blade	-	2 (.9)	41800002



PaverADJUSTER



SlabADJUSTER

## SlabADJUSTER / Multiple Alignment Bar MRE

- Four adjustable blades
- Speeds up alignment process
- Two grips and one hammering point
- Head Width 25.5" (65 cm)

Type	Handle Length in (cm)	Dead Weight lbs (kg)	Order-Number
SlabADJUSTER	36 (91)	13 (6)	51800045
Adjuster Replacement Blade	-	2 (.9)	41800002

## PaverPULLER / Paver Lifter SAH

- Fast removal of unsanded, non-compacted pavers
- Opening Range: 4 - 15 in (9 - 40 cm)
- See Paver Extractor for removal of pavers from a finished pavement

Type	Dead Weight lbs (kg)	Order-Number
PaverPULLER	11 (4.9)	51800050



PaverPULLER